Page 1 of 2

P- #				!	1				
Refer to 1-A01-PPG-001 for Processing Instructions.  Print or Type All Information (Except Signatures)				1. Date 01/25/94	25. DMR. No. 94-DMR				
2. Existing Decement Number/Revision 4-E42-ER-OPS-GT.08, Rev. 3					3. New Document Number or Document Number If it is to be changed with this Revision. N/A				
4. Originator's Name/Proces/Page/Location R.P. 01/21/94,  Bill Freedman Gregg Anderson/8504/NA/000				5. Document Title Surface Soil Sampling					
6. Document Type II Precedure  7. Document Medification Type (Check only one I) New II Revision III Intent Change					☐ Nonintent Change ☐ Editorial Correction ☐ Cancellation				
S. Jian	9. Page	10. Step			11. Proposed Modifications				
1	6	Sec.	Note: The Scope Limitation for this DMR is OUs 8, 9, 10, 12, 13, 14 (Industrial Area OUs) for unpaved radiological and non-radiological surface soil sampling.  Replace third sentence with: "A visual description will be performed on each soil sample						
		4.0	as they are being collected, using U.S.C.S. and Munsell reference charts to aid in the visual description. The following characteristics will be documented in the field log book and on the Surface Soil Sampling Field Activities Report:						
·			<ul> <li>Predominant type of material (i.e., gravel, sand, silt, clay, etc.)</li> <li>Grain size (based on U.S.C.S. grain size divisions)</li> </ul>						
			i .	•	sell Rock-Color	· ·			
			1	•	S.C.S. classific	-			
			, –		lar through wel				
				· •	, moist, saturate				
			<ul> <li>Organ</li> </ul>	ic content (i.e.,	abundant roots	, peat, etc.)"			
2			•						
	9	Sec.					ling is to determin		
		4.2.1		_			ound, and if nonra	dionuclide	
<b>:</b> [:			contamin	ants have been	deposited on the	e ground."	CALL OF ACCIDICATION	I BEVIEW WANCO	
			•			DOCUM	ENT CLASSIFICATION	I REVIEW WAIVER	
12. Justi	ication (R	osson for Mo	dification, EJO#,	, TP#, etc.)		PER R	HINE 11 19		
	Item No.s 1,3,4,5,6,7,8 - DOE has required that all surface soil sampling employ the RF Method, and CDH has recommended collecting 5 subsamples with the RF Method rather than 10 subsamples. Reference Letter: G.W. Baughman, CDH to F. Lockhart, U.S. DOE,  RE: Soil Sampling Methodology for Industrialized Area QUs, September 1, 1992.								
			-	-	·	•			
					the extensive classificati nely repetitive and mani		GT.1, and the similarity of	surface soils in the	
المعتدد ا	den is for c				13, and open N/A in Blocks I	4 and 15. If multifaction is for any	r type of change or a camellation, o	rgenisseione are listed in Block	
13. Organi	•	hite, and elgen 14. Print and		ion in Block 15.				15. Date (d'applicable)	
RPM		Bruce Pet		21				01/28/94	
EOM	EOM Maria Broussard		mare /	18/				01/26/94	
RE Dick Norton			00	Ten TW. Marlow				1/28/94	
IH List Nelowet			wet / Si	Signature on file				1/28/94	
EQS Mark Brooks RR				184 6 K-11				1/28/94	
SME/	SME/FSE M.Z. Litaor MALLAN NO. 101 /26/94							01/26/94	
Greg	16. Originator's Supervisor (print/high-fdate)  Gregg Anderson\8504\080  01/26/94								
17. Assigned SME/Phone/Page/Loostion M.Z. Litnor/8583/NA/080  18. Cost Conter 202				19. Charge Humber ENV-GT	20. Requested Completion Date 01/31/94	21. Effective Date -01/2-0194			
23. Australia Review?  Yes   No   S									
-	24. Respectitio Manager (print, sign, sph)  B.D. Peterman  O1/28/94								
REVIEWED FOR CLASSIFICATION/UCNI									

ACLAN COLOCO 4-0014-000170 734

Refer to 1-A01-PPG-001 for Processing Instructions.

Print or Type All Information (Except Signatures)

25. DMR. No. 94-DMR- 000 133

rime or type All miorminon (except signantes)				DMK. No. 94-DMK- WO 155			
2. or 3. Document Number/Revision 4-E42-ER-OPS-GT.08, Rev. 3				3. Document Title Surface Soil Sampling			
8. hum 9. Page 10. Step			11. Proposed Modifications				
3	9	4.2.1	Substitute "Five" for "Ten" in the last se	ntence.			
4	11	4.2.4	Substitute "Five for "Ten" in the first sentence.				
5	11	4.2.4	Change second sentence to read: "Samples should be collected at the center and corners of one, 1-meter square template, centered on the selected sample site."				
6	12	4.2.4, Step 4	Change to: "For radiological samples, remove soil samples from the jig interior with scoop/trowel and place it in a 10-mesh metal sieve that has a plastic bag attached to the bottom to receive the soil that passes through the sieve. For nonradiological samples, remove soil samples from the jig interior with scoop/trowel and place it in a 10-mesh stainless steel sieve which is placed in a stainless steel pan. After all 5 samples (5 samples from the one 1-meter square templates) have been placed into the sieve, attach the sieve cover and seal with tape. Sieving may be done in stages if all 5 soil samples cannot be placed into the sieve at the same time."				
7	12	4.2.4, Step 6	Replace the 4th through 7th sentences with: "Mix each quarter thoroughly with a scoop/trowel. Roll the quarters back together and smooth to a uniform thickness in the stainless-steel pan. Collect adequate sample volume in appropriate laboratory designated sample container(s) with stainless steel scoop/trowel by making an "S" motion through the composited soil."				
8	13	4.2.4	Replace with: "Place residual sieved soil from quartering and sampling back into original disturbed area."				
9	13	4.2.4	Delete Step 8.				
10	38	Fig. GT.8-	Replace Figure GT.8-3.	· •			

12. Justification (Resson for Modification, EJO#, TP#, etc.)

Item No. 9 - Long-term storage (greater than 90 days) of potentially contaminated soil could present several regulatory issues. The need for additional sample at a later date would be better served by returning to the sample location and collecting another sample.

**EG&G ROCKY FLATS PLANT** 

Manual:

4-E42-ER-OPS

**ERM OPERATIONS PROCEDURE** 

Procedure No.

GT.08, Rev. 3

**MANUAL** 

Page:

1A OF # PR 01/31/94

**Effective Date:** 

01/28/94

Organization:

**Environmental Restoration Management** 

# **LIST OF EFFECTIVE PAGES**

PAGES

PAGES

1A
6-8A
9
11-13
39
Total Number of Pages: 44

EFFECTIVE DATE
OILZBIGH
OILZBIGH
OILZBIGH

94-DMR-000133 94-DMR-000133 94-DMR-000133

Organization:

EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS

ERM OPERATIONS PROCEDURE Procedure No. GT.08,Rev.3

MANUAL


Page: 6 of 4/2 RR \*\*/31/9+

Effective Date: 12/8/93- QR-O1/23/94+

**Environmental Restoration Management** 

Field personnel are referred to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples for further details. Above-surface plant parts and coarse material (pebbles, rocks, and stones) will be removed by the sampling team. The soil samples will be classified according to procedure GT.1, Legging Alluvial and Bedrock Material.

urill hespoliterment to less theoris sample, as they are being collected, using using Sweet states to the less charts to eld instherollegal/pescriptions if the following configurations.

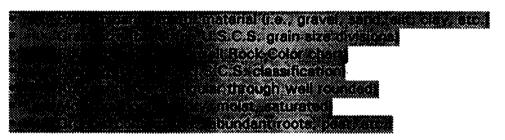

For surficial profiling samples, the sampler will collect representative samples, including organic material and coarse material. All sampling equipment will be protected from the ground surface with plastic sheeting.

# 4.1 SOIL SAMPLING WITH THE CDH METHOD

#### 4.1.1 Introduction

The CDH sampler is one method for collecting soil samples for radionuclide analysis at the RFP. The CDH sampler was designed to sample radionuclides in the top-soil that could become resuspended in the air and thus pose a migration pathway by inhalation. The sampler is designed to obtain a sample from the upper surface 1/4 inch deep from an area 2 inches wide and 2 3/8 inches long, as shown in Figure GT.8-1.

Sampling locations will be described in the FSP. Some samples will be composited to obtain representative samples of large areas and others will be single-location samples. Sampling techniques for either type of sample are the same before compositing.

#### 4.1.2 Equipment and Materials

The following is a list of equipment used for radionuclide contaminated soil sampling:

**EG&G ROCKY FLATS PLANT** 

Manual:

4-E42-ER-OPS

**ERM OPERATIONS PROCEDURE** 

Procedure No.

GT.08,Rev.3

MANUAL

Page:

6A of 44 RR 01/31/4+

**Effective Date:** 

Organization:

12/8/93 R A. O1/28 PQ. Environmental Restoration Management

- CDH soil sampler;
- stainless steel scoop;
- stainless steel lab spoon;
- stainless steel mixing bowl or pan equivalent;
- sample containers;
- sample labels;
- wash and rinse tubs;
- phosphate-free, lab-grade detergent (e.g., Liquinox);
- distilled water;
- plastic sheeting;
- sample locations (map and/or list);
- measuring tape or wheel;

ERM OPERATIONS PROCEDURE MANUAL

Procedure No.

GT.08.Rev.3

Page:

9 of 44 RR 01/31/94

**Effective Date:** 

<del>12/0/93</del> Kr 01/28/94

Organization:

o । 2 इ निय

to pour the soil into the container. Brush any soil that adheres to the scoop into the sample container.

- 9. Close the container.
- 10. After samples are placed in sample containers, the outside of the container will be wiped clean of excess material and it will be placed in a plastic bag.
- 11. Transfer the samples to the sample manager. Refer to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples for the proper paperwork and sample transfer methods. This documentation is a QA record and must go into the ERM records center.
- 12. Either use another set of clean sampling equipment or decontaminate equipment after use and between sample locations. For specific decontamination guidelines, consult procedure FO.3, General Equipment Decontamination. Decontamination according to these procedures is not necessary between composite sample points; however, excess dirt or mud should be cleaned from the equipment.

Duplicate samples will be obtained by offsetting the primary sample location 6 inches to 2 feet upwind or in a direction technically more appropriate and placing the duplicate samples in a separate jar. The location of the duplicate will be documented on the data collection form. The duplicate sample will be composited and containerized following the same procedures as for the primary sample. The frequency of duplicate samples will be defined in the FSP or the Quality Assurance Addendum (QAA).

# 4.2 SOIL SAMPLING WITH THE RF METHOD (JIG AND SCOOP)

#### 4.2.1 Introduction

The purpose of sampling is to determine the amount of accumulated plutonium that has been deposited on the ground, and if no sache a few sometiments. This determination is accomplished by collecting a sample volume of 5,000 cm³ of soil in situ. The jig outlines a square area with 10-cm sides and is driven 5 cm into the soil to cut three sides of the sample (Figure GT.8-2). At the fourth side, soil is removed from outside the jig's perimeter. The scoop is used to finish the cut on both the fourth side of the sample and the bottom surface. Ten five samples should be collected at each location and composited.

94-PIMR-000133 94-DHR-000133

EG&G ROCKY FLATS PLANT

Manual:

4-E42-ER-OPS

**ERM OPERATIONS PROCEDURE** MANUAL

Procedure No.

GT.08, Rev. 3

Page:

11 01 44 RR 01/81/94

**Effective Date:** 

Organization:

01/22/9
Environmental Restoration Management

# 4.2.3 Sampling Plot Layout

A site selection plan as described in the applicable FSP should be used to specify the general site location. The plan must provide adequate information for the sample collection crew to locate each specific site. Sample locations will be marked with an identification sign, as designated in the FSP, so that the area may be located and resampled at a later date. Permission to collect samples and mark the site should be obtained from the appropriate EG&G department or the landowner. Sample collection crews will be accompanied by supervision for all sampling activities to ensure that specified procedures are followed.

The following general site selection criteria should be considered:

- undisturbed location for the time interval of interest:
- near the center of a large, flat, open area;
- not subject to excessive runoff during heavy rain;
- light to moderate vegetation and permeable soil; and
- not in an area of mechanical disturbance.

Consideration of these criteria will depend on the nature of the study. For example, in some instances it may be necessary to investigate an area of mechanical disturbance.

If a sample site is not available that meets the criteria described in the FSP, the location can be moved up to one-half the distance to the next grid sample location or within 10 feet of a staked sample location which is not part of a arid...... If the sample location must be moved further than this distance, regulatory agency concurrence will need to be obtained. Any movement of sample locations will be documented on the surface soil data collection form and in the field crew supervisors logbook.

All selected sites should be located on a map.

### 4.2.4 Procedures

Ten soil samples should be collected at each site and composited for Samples should be collected at the center and corners of twe one motor squares that are spaced one motor apart sing. In the square control of centered octobersale sed site. Figure GT.8-3 illustrates this sample collection spacing. The following procedures will be used for the RF method:

**EG&G ROCKY FLATS PLANT** 

Manual:

4-E42-ER-OPS

ERM OPERATIONS PROCEDURE MANUAL

Procedure No.

GT.08, Rev. 3

Page:

12 of 44 RR 01/31/94

**Effective Date:** 

12/8/93 pp

Organization:

Environmental Restoration Management

- 1. Place the sampling jig on the ground, and using the wood block and hammer, drive the jig into the soil to a depth of 5 cm.
- With minimal disturbance to the soil inside the jig, use a scoop, trowel, or chisel to remove the soil from around the open side of the sample jig.
   Soil should be removed to a depth that will allow easy removal of the sample.
- Discard the soil removed from outside the jig.
- with scoop/trowel and place it in a 10-mesh metal sieve that has a plastic bag attached to the bottom to receive the soil that passes through the sieve. It is a placed by the sieve of the
- 5. Label the sample container into which the soil sample is to be placed. Refer to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples, for the type of information to be included on the label, and the appropriate type of container.

This documentation is a QA record and must go into the ERM records center.

Shake the sieve for several minutes. If the soil is moist, gently crush soil aggregate with fingers, while wearing proper personal protective equipment as prescribed in the applicable Health and Safety Plan, and continue shaking until all soil matrix has passed through the sieve. Discard large particles (cobbles, stones, etc.) that do not pass through the sieve into original disturbed area.

EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS

ERM OPERATIONS PROCEDURE Procedure No. GT.08,Rev.3

MANUAL

Page: 12A of 44 RR 0/31/94

Effective Date: 01/22/94

Organization: Environmental Restoration Management

6. In order to reduce the volume of the sieved sample to the quantity required for laboratory analysis, and still maintain a representative sample; place all sieved soil into stainless steel pan. Mix soil thoroughly with a scoop/trowel. Divide sieved soil into quarters. Subsample each quarter equally so the total amount of subsampled soil to be used for analysis does not exceed 1 kg or one 1 gal paint can. Place each of the four subsamples into one plastic bag. Place plastic bag in metal 1-gal paint can. It is a subsample sinter theretights and the same paint can. It is a subsample status of the same collect adaptates a subsample status as a property of the same collect adaptates as a property.

Leave about 1 inch headspace in paint can.

94-DMR-000/33

EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS **ERM OPERATIONS PROCEDURE** Procedure No. GT.08.Rev.3 MANUAL 13 of 44 01/31/94 Page: **Effective Date:** 08 28 94

Organization:

Environmental Restoration Management

7. Place residual sieved seil from quartering incide plactic bag, and place bag inside another paint can. If residual soil exceeds volume of one 1gal-paint can, place execus residual-sieved seil back into-criginal <del>disturbed area.</del> 

- Store residual sieved seil for petential use at a later date.
- <del>9#</del>. Decontaminate sieve between uses following procedure FO.3, General Equipment Decontamination.

#### 4.3 GRAB SAMPLING (SPADE AND SCOOP)

#### 4.3.1 Introduction

Surface soil samples can be collected for radionuclide analyses using grab sampling (spade and scoop) methods.

Sampling locations and the number of soil samples will be described in the specific Field Sampling Plan for each project. Equipment, sample plot layout, and sampling procedures are described in the following sections.

#### 4.3.2 Equipment and Materials

The following is a list of equipment for contaminated soil sampling:

- spade (long handle);
- stainless steel hand auger (optional);
- mason trowel:
- stainless steel scoop:
- stainless steel lab spoon;
- sample labels;
- sample containers:
- wash/rinse tubs:
- phosphate-free, laboratory-grade detergent (e.g., Liquinox);
- distilled water:
- plastic sheeting;
- sample locations (map and/or list);
- appropriate health and safety equipment as specified in the applicable Health and Safety Plan;
- photoionization detector (PID) or flame ionization detector (FID);
- logbook:

94-DMR-000/33

SURFACE SUIL SAMPLING				
EG&G ROCKY FLATS PLANT	Manual:	4-E42-ER-OPS		
ERM OPERATIONS PROCEDURE MANUAL	Procedure No.	GT.08,Rev.3		
	Page:	39 of 44 01/81/94		
	Effective Date:	12/8/93 01/28/94 P.P.		
	Organization:	Equipopmental Bastavation Manager 1		

Figure GT.8-3 RF Method Soil Sampling Location Spacing

000/33		<b>.</b>		
-DMR-00	meter	] &		]
4-16				
		[1 m	eter 1	

⊗ - Sample Location

☐ **\_Subsample** Location